

Reparation of the Negative Air Pumping



Reparation of the Negative Air pumping

1

2

3

4



Necessary tools:

Grease

Tool for inner rod



The first step is the disassembling of the pumping.

To start with the disassembling of the fork and to unscrew the inner rod from the tube.



Reparation of the Negative Air pumping

- 1
- 2
- 3
- 4

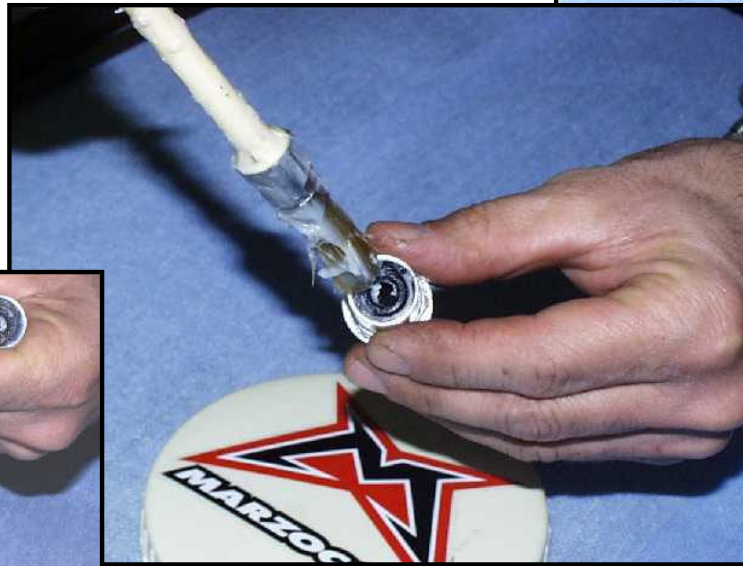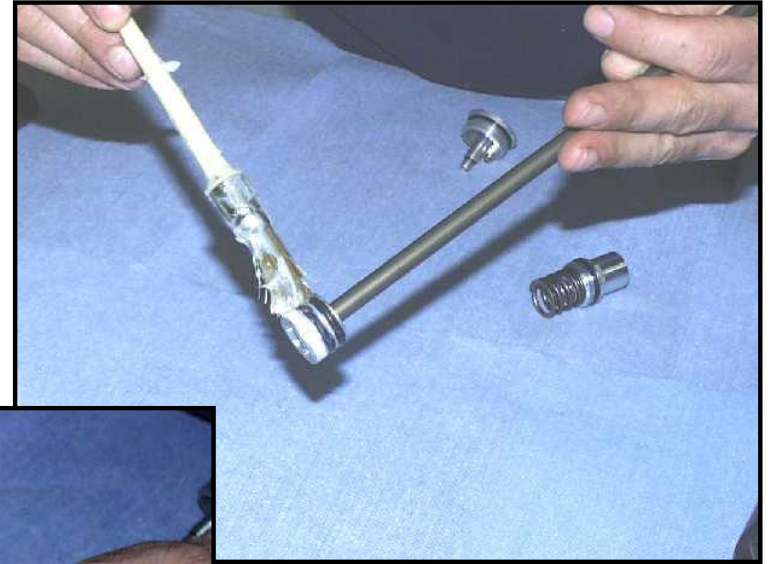

Second step: to lubricate (by grease) abundantly the internal parts of the tube



Reparation of the Negative Air pumping

- 1
- 2
- 3
- 4



After lubrication of every parts, riassenble the pumping.

- 1
- 2
- 3
- 4



Before the riassembling of the pumping into the monolite

To libricate (by grease) abundantly the sliding parts of the monolite: oil seal, lower bushing and upper bushing.